


ZODIAC CDS3458 : EMERGENCY PROCEDURE

→ In case of diesel engine failure



Observe all safety instructions described in manual ZODIAC CDS3458

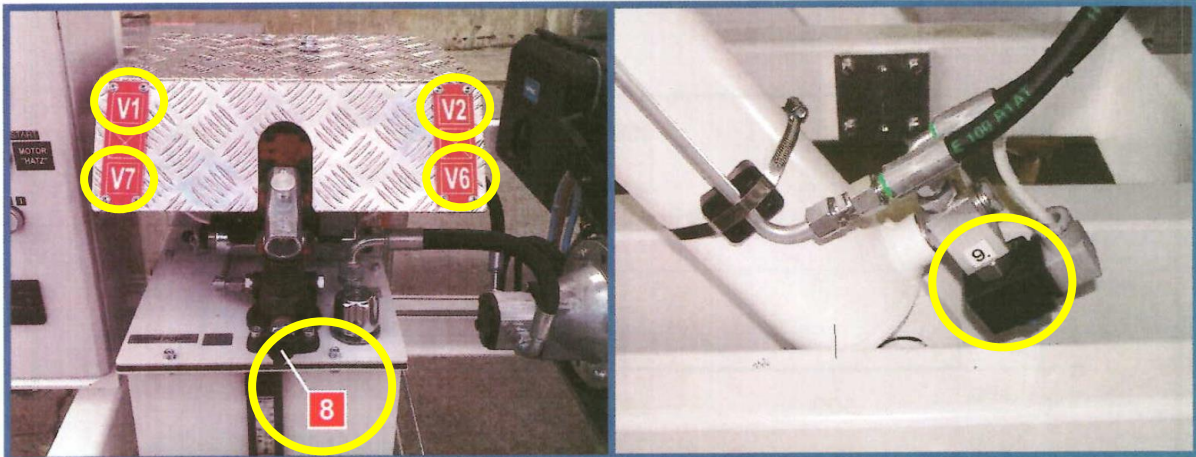

1. Putting stairs into the stabilized position

Close valves 7 and 2 on hydraulic aggregate and eject stabilizers into the working position with using of hand pump.

2. Raising stabilizers into the transport position

Close valves 6 and 2 on the aggregate and retract stabilizers into the transport position with using of hand pump.

3. Raising stairs into the working height

Open the valve number 9 at the bottom of the hydraulic cylinder, press valve 2 on the aggregate and lift the platform slightly above the aircraft door sill by using a hand pump. Then carefully press the valve number 1 on the aggregate and lower the platform into closest locked position. The platform will be secured automatically.

4. Putting stairs into the transport height

Slightly raise the stairs according to point 3 into a position which securing locks can be released by the appropriate lever. Move the lever to the unlock position and press valve 1 on the aggregate. Platform will lower to the desired height, where you can secure stairs by release of the locking lever.

WARNING! CHECK VALVES 6 AND 7 ARE OPEN AND VALVE 9 IS CLOSED BEFORE STARTING THE ENGINE